


跌倒报警器产品手册

目 录

1 跌倒报警器概述.....	1
2 外观介绍及佩戴说明.....	1
3 安装 SIM 卡.....	1
4 基本功能.....	1
4.1 开机和关机.....	1
4.2 跌倒自动报警.....	1
4.3 通话功能.....	2
4.4 GPS 定位.....	2
4.5 “位置解析工具”软件.....	2
4.6 查询机主状态.....	3
4.7 报警短信群发.....	3
4.8 定时温馨提示.....	3
4.9 电量不足提示.....	3
4.10 开机提示.....	3
4.11 电池充电.....	3
5 短信设置.....	3

1 跌倒报警器概述

2 外观介绍及佩戴说明

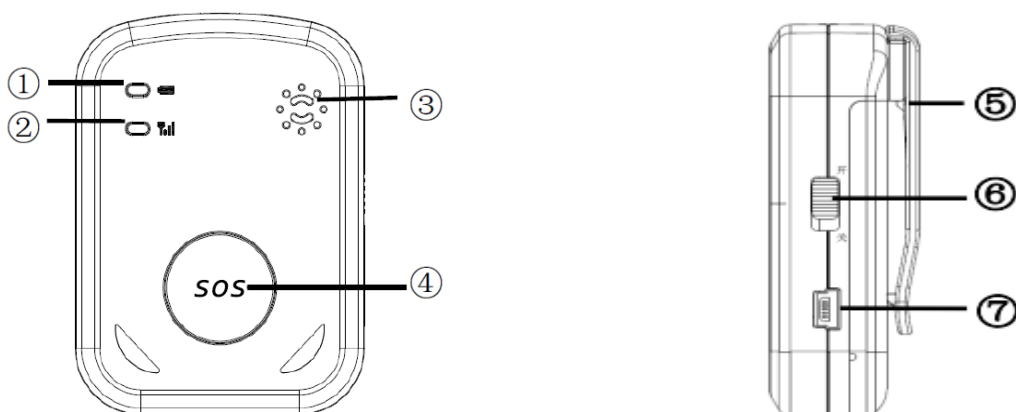

注意:

3 安装 SIM 卡

()

4 基本功能

4.1 开机和关机

4.2 跌倒自动报警



注意,检测到跌倒,即将发送报警短信
自动报警,机主可能发生跌倒事故,请联系。机主
你

位置信息
好,我需要帮助

已经检测到机主状态正常。机主位置信息

报警通过按键主动解除！

★注意

机主位置信息



注意，检测到跌倒，即将发送报警短信

报警短信发送被取消

4.3 通话功能



4.4 GPS 定位



4.5 “位置解析工具”软件

4.6 查询机主状态

“电量信息”、“报警状态”、
“关注冷暖，机主身边温度××℃”、“机主位置信息”

4.7 报警短信群发

注意：

4.8 定时温馨提示

温馨提示、“电池电
量”、“报警状态”，关注冷暖，机主身边温度××℃。“机主位置信息”

4.9 电量不足提示



足，请提醒机主充电

电池电量不



电量不足，请及时充电



电量耗尽，请充电后使用

电池电量耗尽，所有功能已关闭，请充电后再使用

4.10 开机提示

用户已开机

4.11 电池充电



5 短信设置

短信编辑注意事项：



表 5.1 短信命令设置

设置内容	命令代码
	KBD
	GBD
	CX
	KQF
	GQF
	xHMyyyyyyyyyy x yyyyyyyyyy 2HM1380000000
	x 2HM0000000000
	KTSxx:xx xx:xx
	GTS
	SJxx:xx 时:分 08:30

备注